

Instructions for Affixing Wired Remote Controller Set

Model: RBC-SH-A1LE2



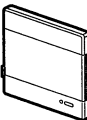





⚠ WARNINGS

- Ask an authorized dealer or qualified installation professional to install. Inappropriate installation may result in water leakage, electric shock or fire.
- Turn off the main power supply switch or breaker before attempting any electrical work. Make sure that all power switches are off. Failure to do so may cause electric shock.
- Connect the connecting cable correctly. If the connecting cable is connected in a wrong way, electric parts may be damaged.
- Please read these sheets beforehand for correct installation.

- Install the attached remote controller cable at a handy place after consultation with its user.
- Using the attached remote controller cable, the remote controller can be installed within 10m from the indoor unit. (Max. 30m)
When the remote controller cable exceeding 10m is necessary, please procure it locally.
Remote controller cable: Vinyl cap tire round cord 0.3mm2.
- The clock display disappears when the power supply switch is turned off or a power failure occurs.
In this case, reset time setting after the power is reset.

Packaged Components

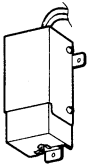- Check all the components below are packaged.

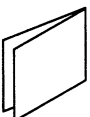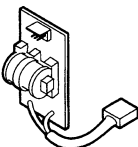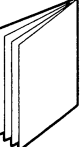No.	Part Name	Q'ty	No.	Part Name	Q'ty
①	 Relay unit	1	⑤	 Card spacer	3
②	 Wired remote controller	1	⑥	 Screws	3
③	 Remote controller cable: 10m	1	⑦	 Installation Manual	1
④	 Mini P.C. board	1	⑧	 Owner's Manual	1

Installation

1. Improvement of electric parts of the indoor unit

1. Remove the electric parts box from the indoor unit, and then remove covers of the terminal block and electric parts. (Fig.1)
2. Insert card spacer ⑤ to the rear side of the electric parts box, and mount mini P.C. board ④ on it. (Fig.2)
3. Insert connector of mini P.C. board ④ into CN24 of the main P.C. board. (Fig.3)
4. Cut the resistance R29 and R92 on the main P.C. board. (Fig.4)

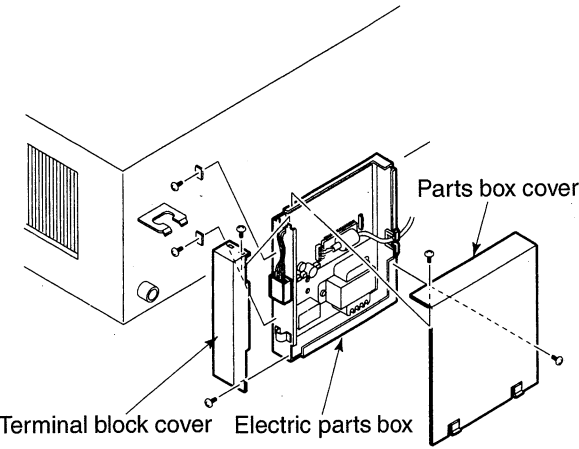


Fig.1

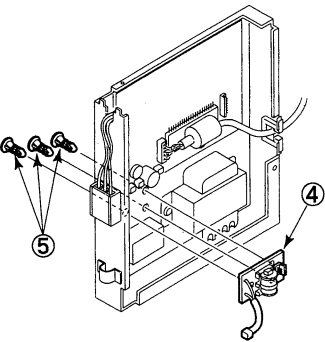


Fig.2

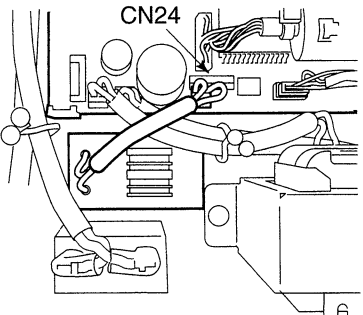


Fig.3

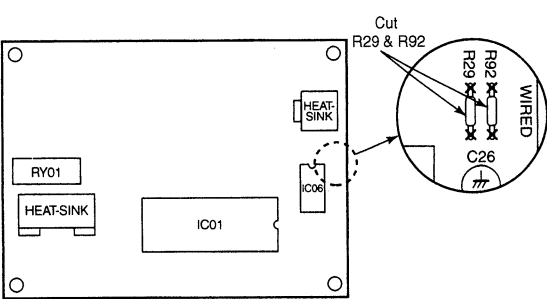


Fig.4

2. Installation of relay unit

1. Using 3 screws ⑥, fix relay unit ① to the opposite side to the electric parts box of the indoor unit. (Fig.5)
2. Insert the lead wires of relay unit ① into connector (CN201) on mini P.C. board ④ and CN23 of the main P.C. board. (Fig.6)
Using the cord clamp, fix the lead wires to be connected to CN201.
3. Mount each cover of the electric parts box, and then mount the electric parts box to the indoor unit.

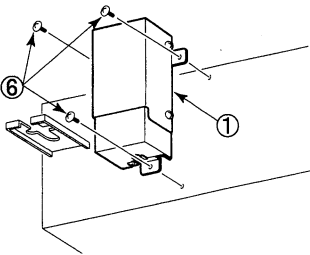


Fig.5

3. Connection of remote controller cable

1. Fit the application terminal side of remote controller cable ③ to the terminal block side of relay unit ①, and then connect cable by matching letters on wired remote controller ②, A, B, and C to those on the terminal block. (Fig.7)

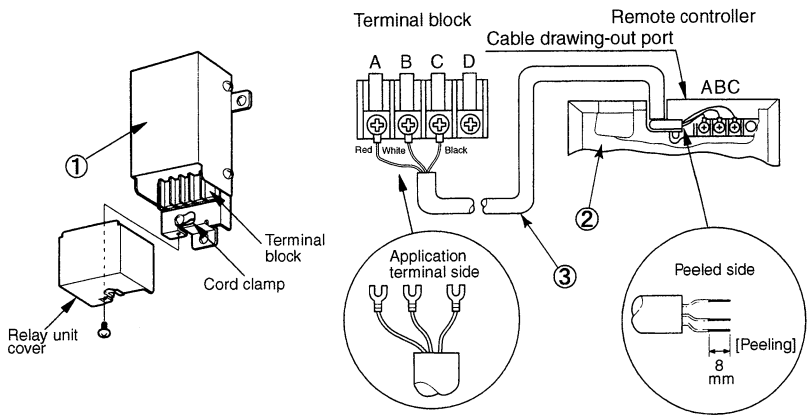


Fig.7

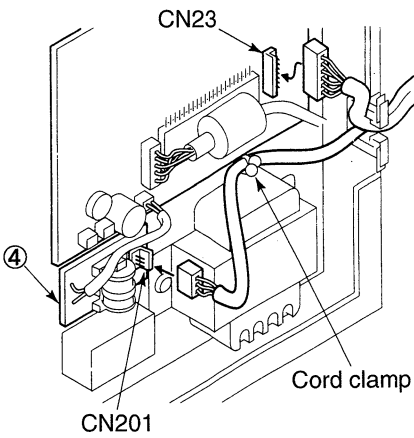


Fig.6